

## Installation Tips

**Because this bath is installed touching 2 walls, it may take several attempts to get the feet at the right length to enable the bath to be square in your room.**

12.12.25

**REMEMBER : most bathroom floors have some slope and many vertical walls are never square.  
Thus the feet need to be adjusted to help with the installation**

### HOW TO.

Flip the bath over onto a protected surface and make sure the four outer feet (Fig. A) are level & slightly protruding past the outer skirt. These 4 feet take the weight

The two inner (Fig. C) feet on 1700mm Models, should be set slightly higher than the other 4 feet (not as close to the floor). These are designed to take the weight when someone steps into the bath.

Caulking then must be done on all sides that touch a wall


## SYMMETRY BATH INSTALLATION



# Fig A



Make sure the four outer feet are level & slightly protruding past the outer skirt.

1700mm Model Shown

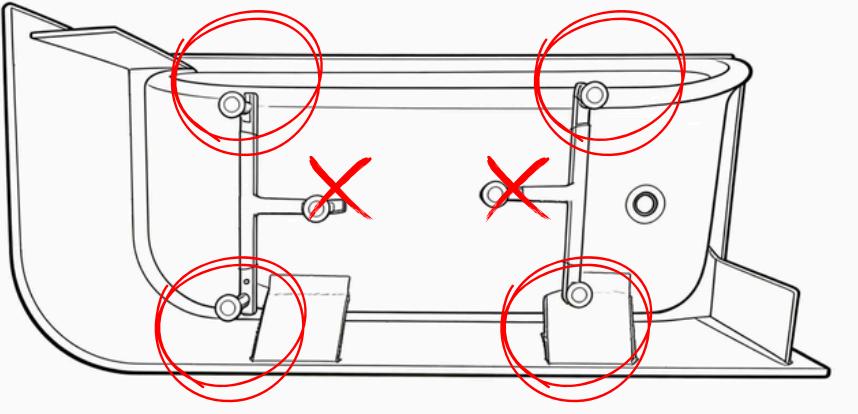

# Fig B

Make sure the four outer feet are level with each other

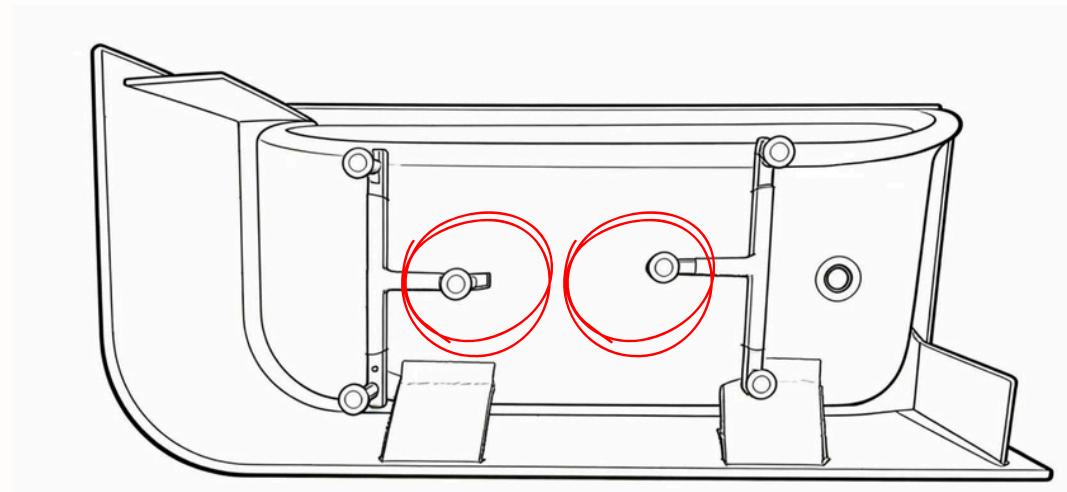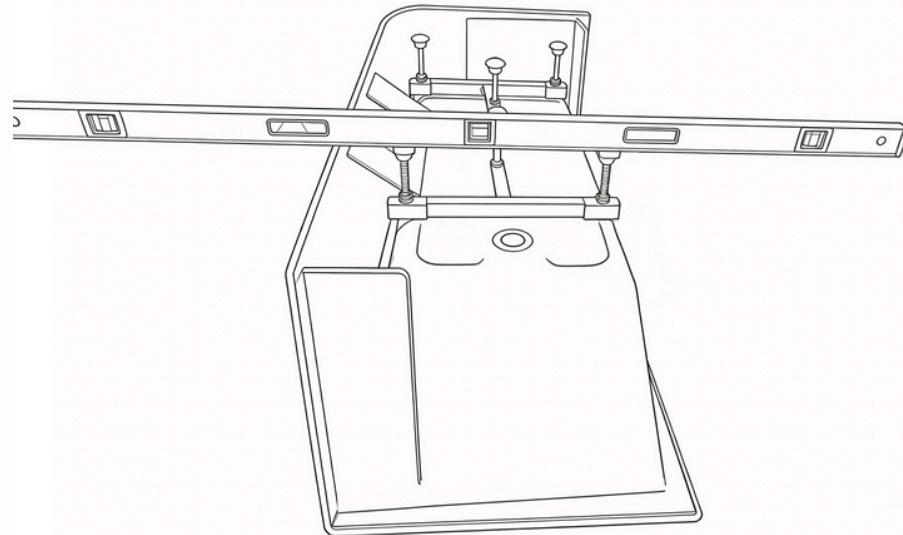

# Fig C

The two inner feet (on 1700mm Models) should be set slightly higher than the other 4 feet, (not as close to the floor)