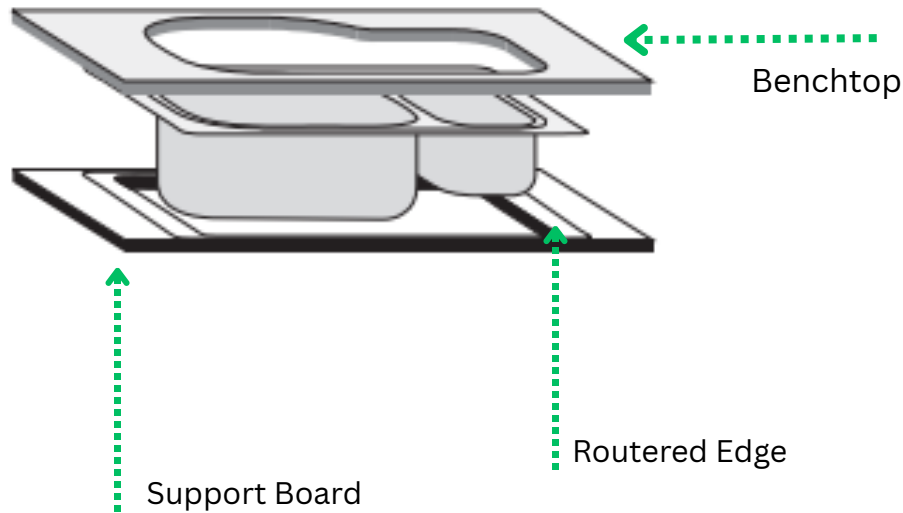
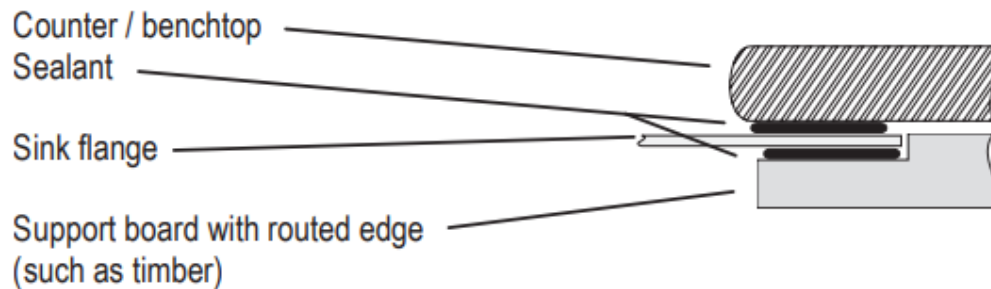


# Undermount Sink Installation

## Sandwich Method



**FIGURE 1**



**FIGURE 2**

### STEPS

- Fix a support board into / over the cabinet and cut the sink hole so that the sink flange will sit above the edge of the board.
- Slightly router the edge so that the sink flange will sit flush with the top surface. [Figure 1](#)
- Test for fit.
- Install sink & then seal between flange and support board.
- Apply sealant to the underside edge of the cutout on counter/benchtop material and position it over the support board to sandwich the sink in place. [Figure 2](#)
- Fasten the counter/ benchtop securely. [Figure 1](#)